

SW series Service Manual

1st Generation SW series – g, kg, oz, lb


- ◆ SW series Repair Overview
- ◆ Calibration Instructions
- ◆ Technical Service Bulletins
- ◆ Recommended Parts List



If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.

K I L O T E C H

SW series BENCH SCALES

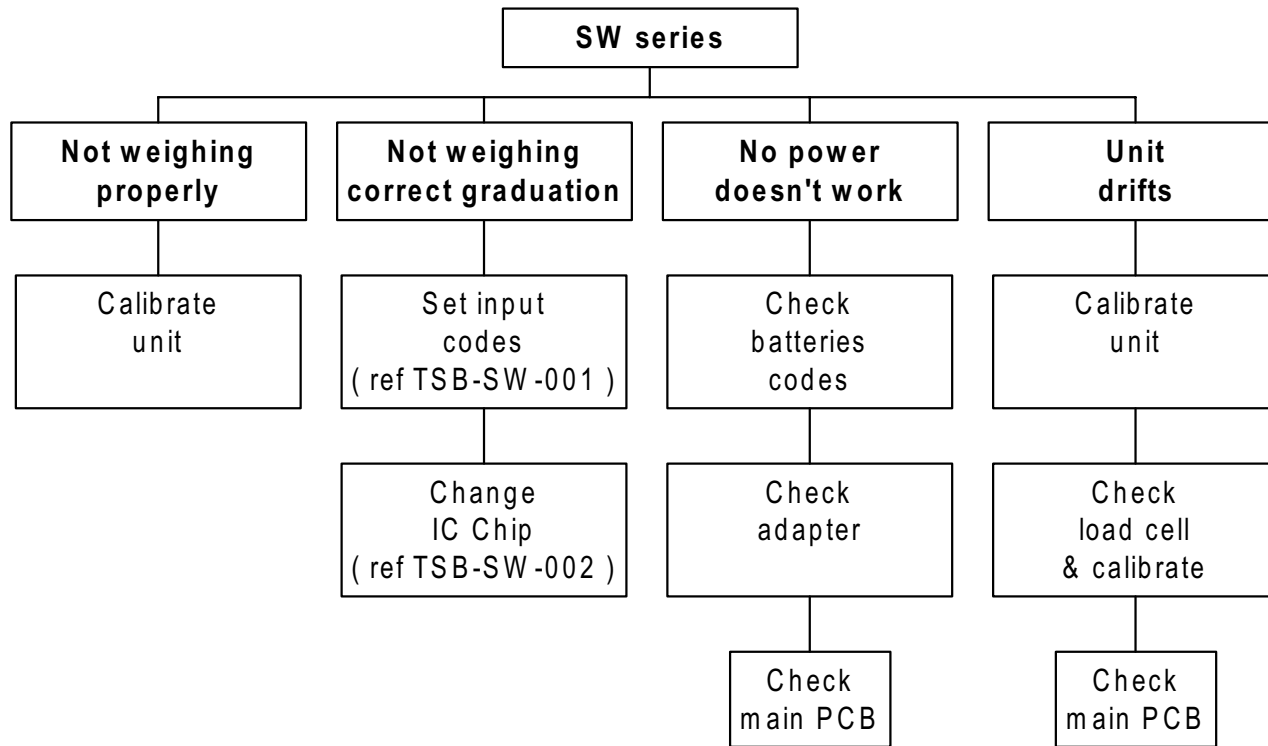

Calibration Instructions

SW-C001 1st generation

If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.

Calibration Instructions : SW-C001

- α MODELS : SW series (1st generation)
 - α ACTION : Calibration instructions
-

To calibrate the SW series, please follow the following procedures:

- 1 Remove the cover plate on the bottom of the scale to locate the calibration button.
- 2 Press down on the switch while powering the unit on at the same time.
- 3 The display will flash CAL three times and then blank out.
- 4 Press the ON/OFF key until the display shows LOAD
- 5 Put the appropriate full capacity on the platter, wait a few seconds for the scale to stabilize and press the ON/OFF key – the display will show END and then blank out.
- 6 Press the ZERO key to return the scale to the regular weighing mode.

If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.

Technical Service Bulletins

SW-TSB001	Setting input codes (1 st generation)
SW-TSB002	Changing in IC Chip

If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.

Technical service Bulletin : SW-TSB001

□ **MODELS : SW series - all capacities (1st generation)**

□ **ACTION : Setting input codes**

To set the appropriate setting codes for each model within the SW series, please note the following procedures:

- 1 Remove the cover plate on the bottom of the scale to locate the calibration button
- 2 Press the ON/OFF key once, and the display will read C-SET and then 1-XX (XX represents a numerical value at random).
- 3 Depending on the model you are working on, please note the codes appropriate to the SW model in question:

	<u>SW5</u>	<u>SW10</u>	<u>SW20</u>	<u>SW50</u>
Setting 1	21	22	23	24
Setting 2	32	32	32	32
Setting 3	12	12	12	12

- 4 To change the numerical value to match the above codes, you must first change the right hand number and move it to the left-hand position.

i.e. Using the SW5 model as example, and if C-SET shows 1-15, then you will need to use the UNIT key until the right hand number displays 2 to match the left hand default codes (setting 1= 21)

- 4 Once the proper left-hand code is selected, move it from the right-hand position to the left-hand position by pressing the TARE key.
- 5 At this time, continue to use the UNIT key to now adjust the right hand number to display 1 (giving us a C-SET code of 1-21).
- 6 Once the appropriate code setting has been selected, press the ZERO key to accept and move to the SETTING 2 line.
- 7 To set the appropriate code for SETTING 2, follow steps 4 to 7. Continue this way until SETTING 3 is completed.
- 8 Once SETTING 1,2, & 3 have been completed, you will then press the ZERO key and the display will show you END.
- 9 Calibrate the scales according to the procedures detailed on CAL-SW-001.

**If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist**

Technical service Bulletin : SW-TSB002

□ **MODELS : SW series - all capacities (1st generation)**

□ **ACTION : Changing the IC93CC46 Chip**

When setting the input codes does not work, it will be required to change the IC93C46 chip on the main board. the procedures below details how this is done:

- 1 The IC93C46 is located towards the center left of the main board (1 ½" left from the center of the processing chip). It is identified with the code U3.
- 2 To remove the chip, you must unsolder all 8 pins that attach the chip to the main board.
- 3 First use an appropriate wire cutter and carefully cut each of the 8 pins that attach the chip to the main board.
- 4 With tweezers, hold the chip and use a soldering iron to unsolder each pin, one at a time, until you are able to remove the chip.
- 5 With a lead remover, remove all excessive lead from the main board.
- 6 Align the new chip with the circle mark that is found on the main board and its' corresponding circle mark on the chip.
- 7 When the chip is properly attached, the scale will need to be calibrated (reference SW-C001).

**If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist**

Recommended Parts List SW series

<u>Item Description</u>	<u>Item Number</u>	<u>Generation</u>
Adapter	851184	1 st
Main PCB board	851175	1 st
SW keypad overlay	851174	1 st

If you should have any questions, please call 1.800.694.4445
and ask for our Technical Service Specialist.